# Treasure Hunt 2012

## Omega$^2$ Device Assembly Instructions

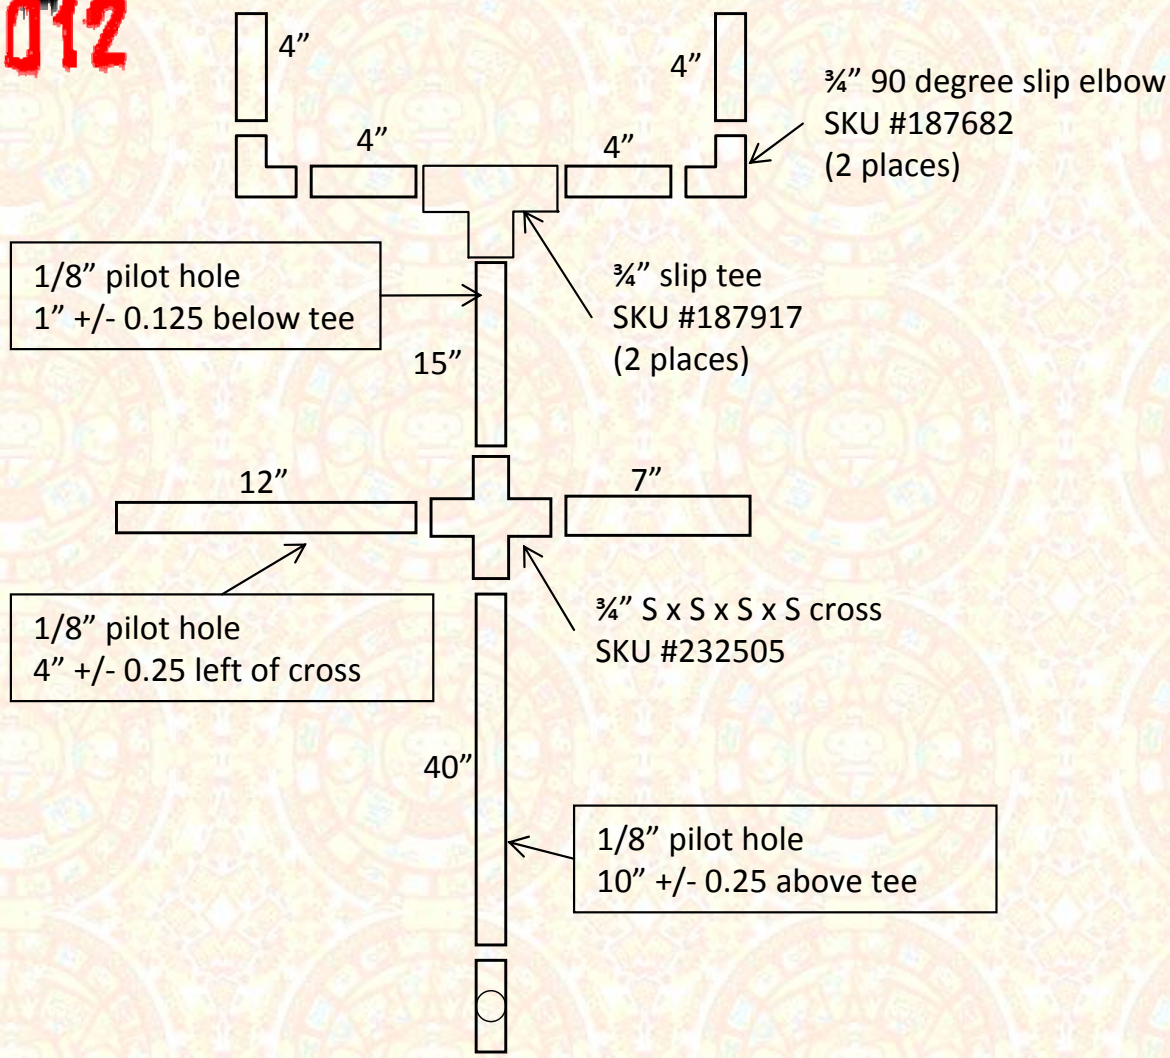


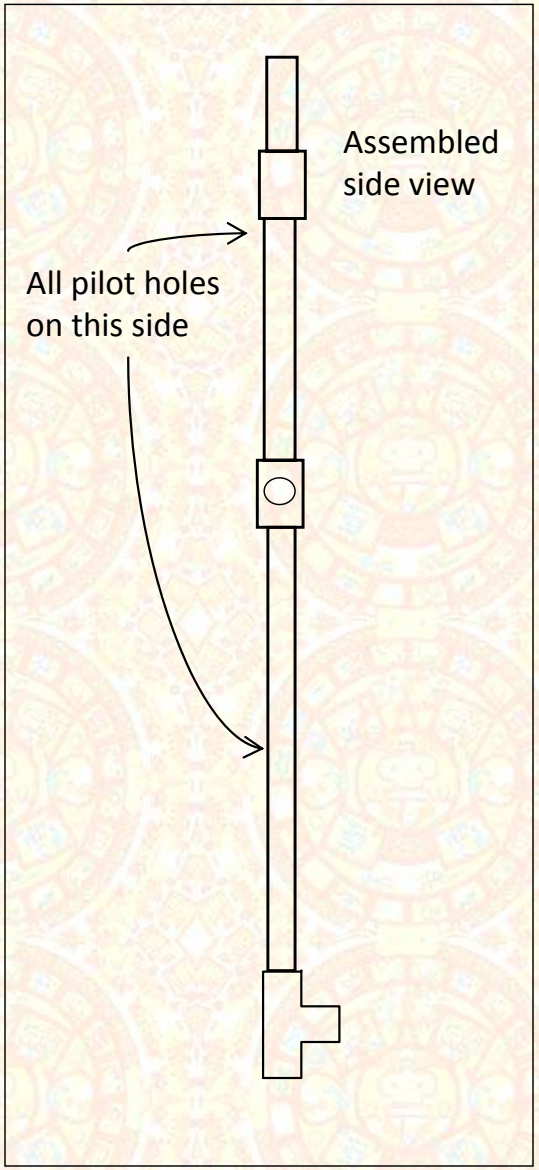


Notes:

1. All pipe ¾” PVC, schedule 40
2. Assemble using PVC primer and PVC pipe cement
3. With the shorter arm on the right, the bottom tee points to the rear.